

TAPS-6

COMMAND SUMMARY

COMMAND	FUNCTION
A	Display All parameters
S	Display status screen
T	Display time of day
D	Dump (transfer) data from memory
R	Run (Sounder mode only)
E	Erase data from memory
V	Display battery voltage
CTRL-D	Unerase: restore data memory pointers
CTRL-P	Program user-selected operating parameters
CTRL-R	Reload parameters from EEPROM
CTRL-T	Set time of day
CTRL-X	Enter test mode
CTRL-Z	Reprogram internal constants

All commands are one-character commands (some require pressing CONTROL and the character simultaneously). Carriage returns are not required for commands (although they are needed when entering values).